


REPORTS


From the idle menu, tap ☰ .

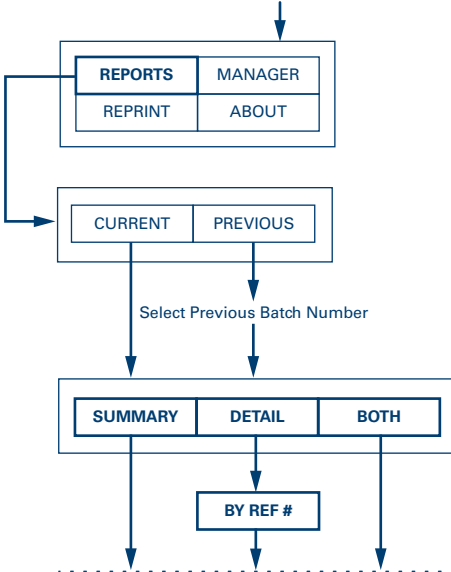

*Contacting Host...
Connecting to Primary...
Receiving...
Building Report...
Printing...*

END OF DAY PROCESSING

From the idle menu, tap ☰ .

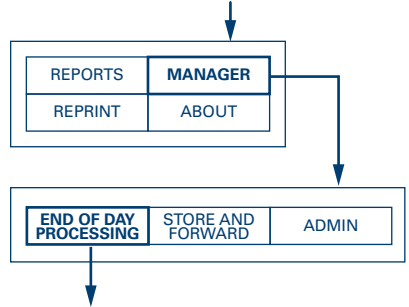


*Contacting Host...
Connecting to Primary...
Receiving...
Building Report...
Printing...*



CHANGE YOUR MANAGER PASSWORDS

Only the manager level user can change the manager password.

From the idle menu, tap ☰ .

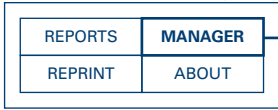

Enter the **MANAGER PASSWORD***.
Tap [✓]

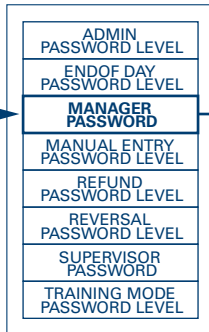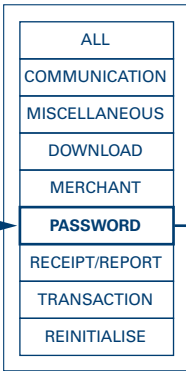

Tap [←] to delete the pre-programmed default password that are masked.

Enter Password.
Tap [✓]

Terminal prompts: **SAVE THIS PARAMETER**
Tap [✓] for Yes [✗] for No.

Tap [✗] to return to the Password menu screen.

Tap [←] for menu screen.

*The default manager password is 2222222.